

CONTENTS



 
Illustrations are for reference only. Styles may vary from actual contents.

BATTERY INSTALLATION

The batteries included in your doll are for in-store demonstration. Before beginning, and adult must install fresh alkaline batteries. Here's how:

1. Open the hook and loop fastener on the doll's back and remove the battery compartment.
2. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover.
3. Install two (2) fresh 1.5V AAA (LR03) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
4. Replace the compartment cover and tighten the screw. Then, insert it back into the doll's back.

Make sure the heart button is in position with the heart on the tummy when replacing.

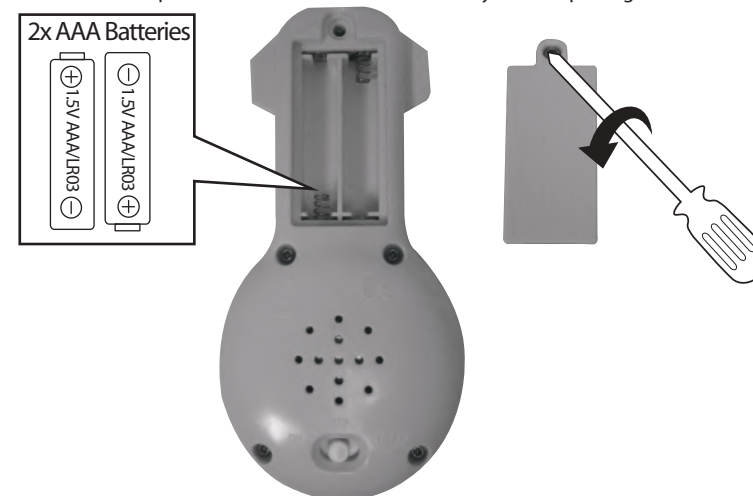

'Let's care for the environment!'  
The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



1117-0-E/INT


© Zapf Creation AG  
Baby born® is an internationally registered trademark of Zapf Creation AG.  
Manufactured and distributed under license by MGA Entertainment, Inc.  
16300 Roscoe Blvd.  
Van Nuys, CA 91406 U.S.A.  
(800) 222-4685  
**Printed in China**

MGA Entertainment UK Ltd.  
50 Presley Way  
Crownhill  
Milton Keynes, MK8 0ES  
Bucks, UK  
+ 0800 521 558




The preferred method of contact for Customer Service is through our e-mail contact form at [www.mgae.com](http://www.mgae.com)


## QUICK START

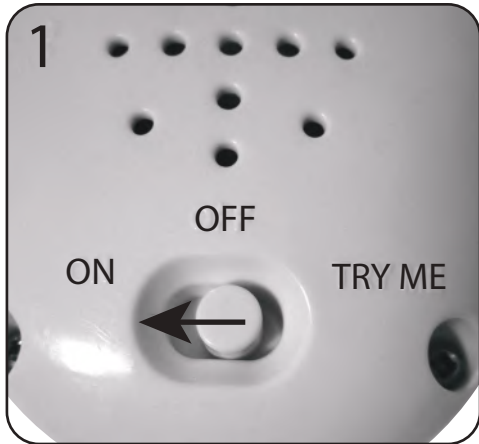 

 Turn the switch located on the battery compartment from TRY ME to the ON position.

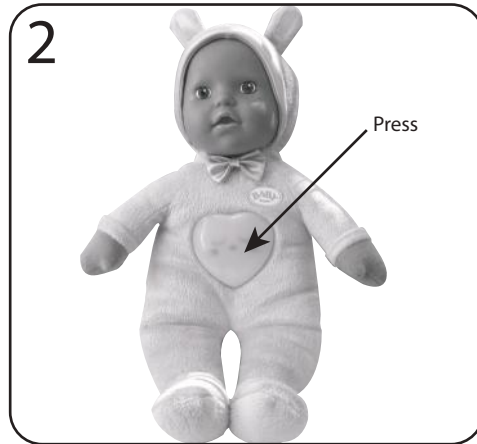

 Press the doll's heart to play Rock-a-Bye Baby. The heart will light up.

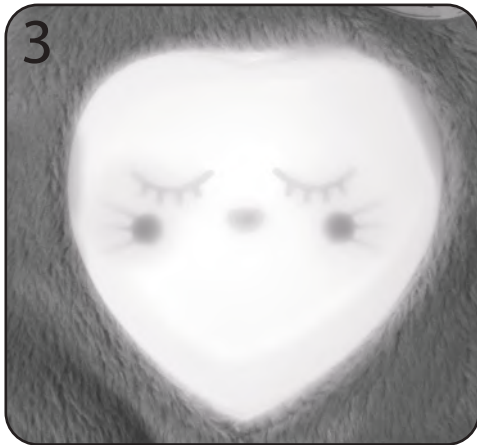

Press and hold the heart for about one second to decrease the volume. To switch back, hold it for another one second.

To turn off the music, press and hold for approximately 4 seconds or until it turns off.

## IMPORTANT INFORMATION

- To wash, remove the battery compartment from the doll and hand wash. Then, place the doll inside a pillow case and machine dry on gentle cycle.
- Do not leave the doll in direct sunlight for an extended period of time.
- Keep moisture away from battery compartment.
- Turn the switch from ON to OFF to conserve battery power.

## SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
- Use only the type battery recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity ( + and - ).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.

## FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device. CAN ICES-3 (B)/NMB-3(B).